



HOW 2 INSTRUCTIONS

Engine type: all 4-stroke Gasoline carburetor auto and truck makes

Product(s) for application: Sea Foam Spray, Sea Foam Motor Treatment

Part number(s): SS14CA, SF16CA

Quantity: 1 can of each



HOW TO CLEAN A CARBURETOR INTAKE – GASOLINE 4-STROKE AUTO

Getting started: Add a cleaning dosage of Sea Foam Motor Treatment to the fuel tank. Best to add at least 15 mL per Liter of fuel when tank is low to maximize treatment concentration.

1. Start and warm engine to operating temp, then turn off accessories and shut off engine.
2. Remove the air cleaner/cover to access the carburetor throat.
3. Use a scissors to cut the Cleaning Tube to a straight length of 15 to 20 cm.
4. With vehicle in park and parking brake applied, use a helper to start and hold the engine at 1000 RPM over factory idle spec for the duration of the spray treatment.
5. With tube attached, spray continuous until contents are empty. (Approx. 4 to 5 minutes.)
6. When can is empty, shut off engine and allow the engine to hot soak for 5 to 15 minutes.
7. While waiting, re-attach and secure air cleaner/cover.
8. After hot soak period, start and drive the vehicle under load for at least 5 minutes.

Apply aggressive acceleration when possible and safe. Under load (working in gear) is emphasized – Revving the engine at high RPM in park or neutral is NOT encouraged.

Additional

Sea Foam Motor Treatment only contains petroleum-based ingredients and is always safe to use in all types of carburetor engine fuel systems. It does NOT contain harsh detergent or abrasive chemicals.

NOT FOR USE IN DIESEL AIR INDUCTION SYSTEMS

When applied through carburetor intakes, Sea Foam Spray works to help:

- ✓ dissolve gum, varnish, hydrocarbon residues, and deposits
- ✓ clean carburetor intake areas, intake valves, pistons, and combustion chambers
- ✓ clean and lubricate throttle valves, bushings, all upper cylinders

Maintenance Tips:

- Use Sea Foam Spray to fog/lubricate carburetor intakes and cylinders for long-term storage
- Sea Foam in your tank is always cleaning and lubricating the entire fuel system

WATCH THE VIDEO  Sea Foam Official

www.seafoami.com